




























QUICK REFERENCE

 : (+) button

 : Mesh Intercom button

 : (–) button

 : Center button

Type	Operation	Button	Duration
Basic operations	Power on	 & 	Press for 1 second
	Power off	 & 	Single tap
	Volume up/down	 or 	Single tap
Phone	Phone pairing		Press for 5 seconds
	Answer phone call		Single tap
	End phone call		Press for 2 seconds
	Reject phone call		Press for 2 seconds
	Activate voice assistant		Press for 3 seconds
	Speed dial		Press for 3 seconds
	Play/Pause music		Press for 1 second
	Track forward/back	 or 	Press for 1 second
Mesh Intercom™	Mesh Intercom on/off		Single tap
	Mute/unmute mic		Press for 1 second
	Channel selection		Double tap
	Mesh grouping		Press for 5 seconds
	Mesh Reach-Out request		Triple tap
	Reset mesh		Press for 8 seconds
Wave Intercom™	Wave Intercom on		Double tap
	Wave Intercom off		Single tap
	Switch to Mesh Intercom		Single tap
Configuration menu			Press for 10 seconds